

Typ 3 686 04, 3 686 15, 3 686 22

Škoda Octavia III. Limousine 02/13 →
Škoda Octavia III. Combi 05/13 →



ca ...30 min.

Milotec®

Attrappe Auspuffblende • Atrapa výfuku • Exhaust screen dummy • Faux cache d'échappement

Montageanleitung
Montážní návod
Fitting instructions
Instructions de montage





Technische Änderungen vorbehalten
Technická změna vyhrazena
Subject to technical alterations
Sous réserves de modifications techniques

Lieferumfang • Obsah balení • The pack contains • Fournitures:


Ⓑ 4 x

Ⓒ 1 x


Ⓐ

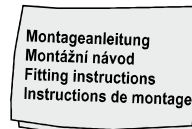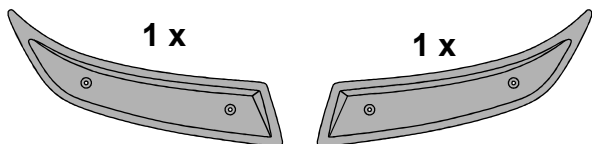

TORX 20


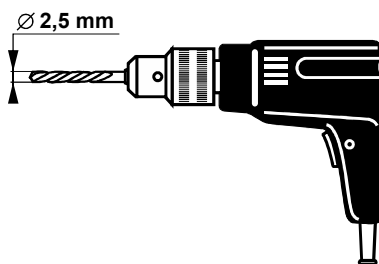


1.


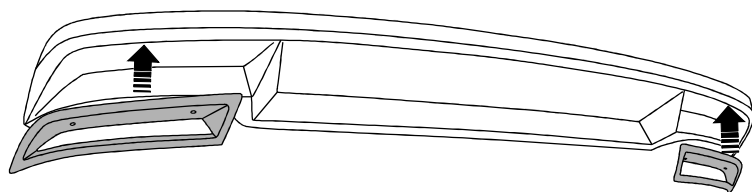


TEST



2.

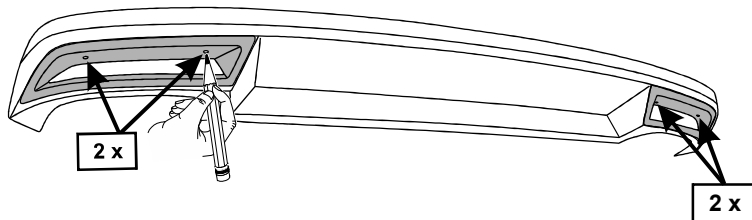


3.

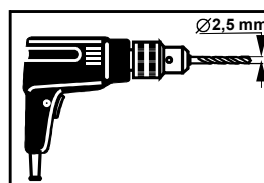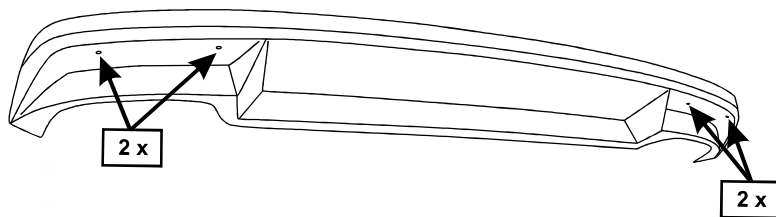

4.

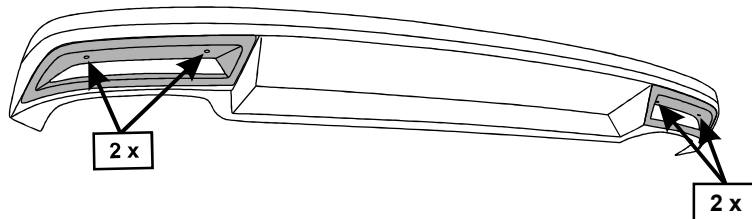

TORX 20



5.

